



Configuration Profiles For CLV 41x Bar Code Scanners

SICK


Profile 1: Default Parameter Set (Factory Setting)

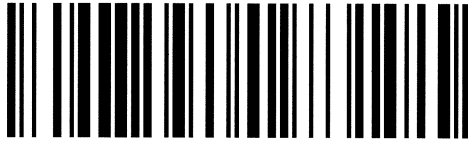

Profile 2: Host Interface: 38 400 Bd / 8, 1, none / No Handshake

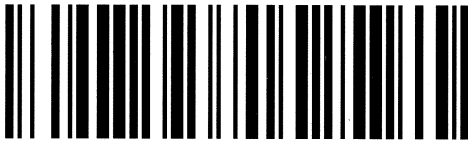


Profile 3: Host Interface: Network Application (38 400 Bd / 7, 1, odd / ID 99)

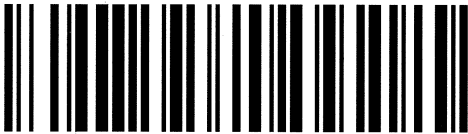


Profile 4: Host Interface: Read Result Output Immediately



Profile 5: Host Interface: Separator: "ST" / Terminator: "CR LF"

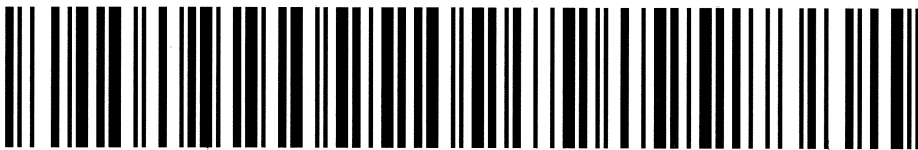

Profile 6: Device Configuration: Master Mode / Automatic Timeout / 1 Slave

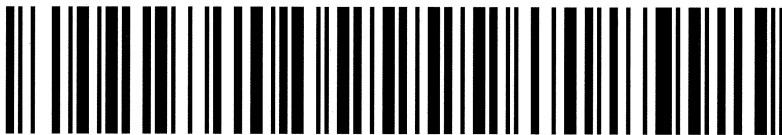


IMPORTANT!

The presentation of profile barcodes overwrites the previous parameter settings of the CLV 41x. This function should be used carefully! Before you scan any codes, fold the card in such a way that only the segment you want to present is visible.


Configuration Profiles For CLV 41x Bar Code Scanners

SICK


Profile 7: Dev. Config.: Master Mode / Automatic Timeout / 2 Slaves

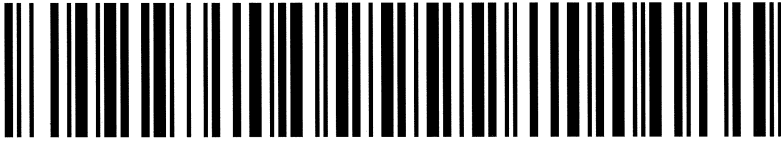


Profile 8: Device Configuration: Slave Mode

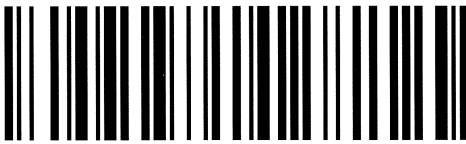


Profile 9: Host Interface: Header: "/GN" (For Pass-Through Mode)

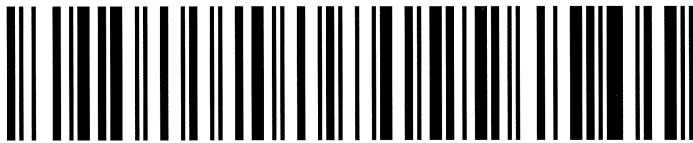

Profile 10: Activating / Deactivating AutoSetup

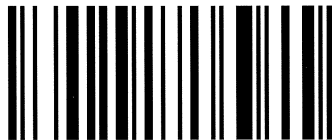

Profile 11: Host Interface: Temporary Default Setting ON

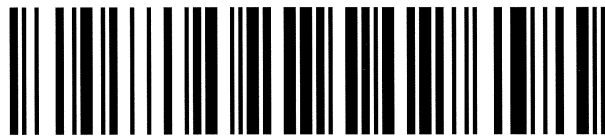

Profile 12: Host Interface: Temporary Default Setting OFF



ACHTUNG!

Das Präsentieren von Profile-Barcodes überschreibt die früheren Parameter-einstellungen im CLV 41x. Mit Vorsicht anwenden! Die Karte vor dem Scannen so falten, daß nur das gewünschte Segment sichtbar ist.